
SENDER ALARM BOX INSTRUCTIONS

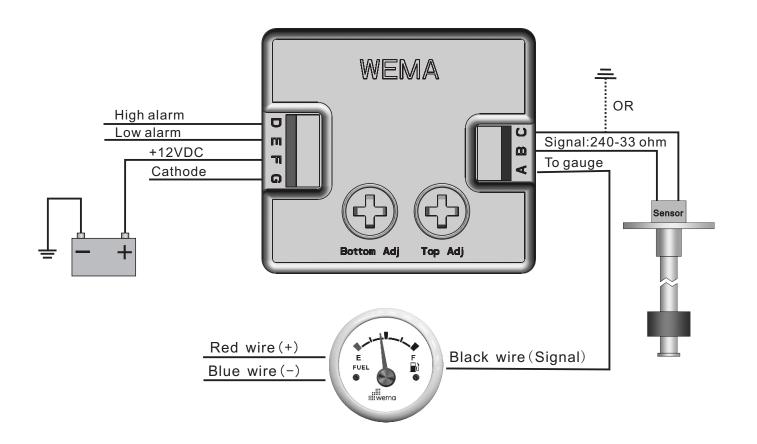

INSTALLATION STEPS

Assembly instruction:

- 1. Fix the SAB alarm boxes in a proper position.
- 2. Connect the wires according to conjoining instructions, and also the alarm equipment. Ensure the good connection before debugging with power.
- 3. Slide float slowly from middle to the top of the SSS/SSL sensor, and observe the position to start the high alarm. In order to meet different needs of different users, the startup position can be adjusted by turning the button "-Top Adj+" with an adjustable range of Full~3/4.
- 4. Slide float slowly from middle to the bottom of the SSS/SSL sensor, and observe the position to start the high alarm. In order to meet different needs of different users, the startup position can be adjusted by turning the button "-Bottom Adj+" with an adjustable range of 1/4~Empty.
- 5. The SAB alarm boxes must be used together with 240-33ohm sensors. To get warning signals right, sensors, meters must be used with the SAB alarm boxes.
- 6. The working load current of each one line outputting for alarm box should be ≤ 0.5 A.